



## ***The update procedure through OTA – Allview P6 lite / from Android 5.1 to Android 6.0 / 29.09.2016***



*The software update advantages are:*

- ✓ *software stability improvement;*
- ✓ *fixing some minor bugs.*



**ATTENTION!** *The phone must be fully charged when initializing the procedure.*




**ATTENTION!** *Please do not stop the update operation under any circumstances.*

*The software update is an operation done on own responsibility by following the steps below.*

To update the software version of the **Allview P6 lite** smartphone it is necessary to follow the next steps:




1. Turn on the phone and connect it to a wireless network.
2. Make sure the SD Card is inserted and selected as the default write disk.

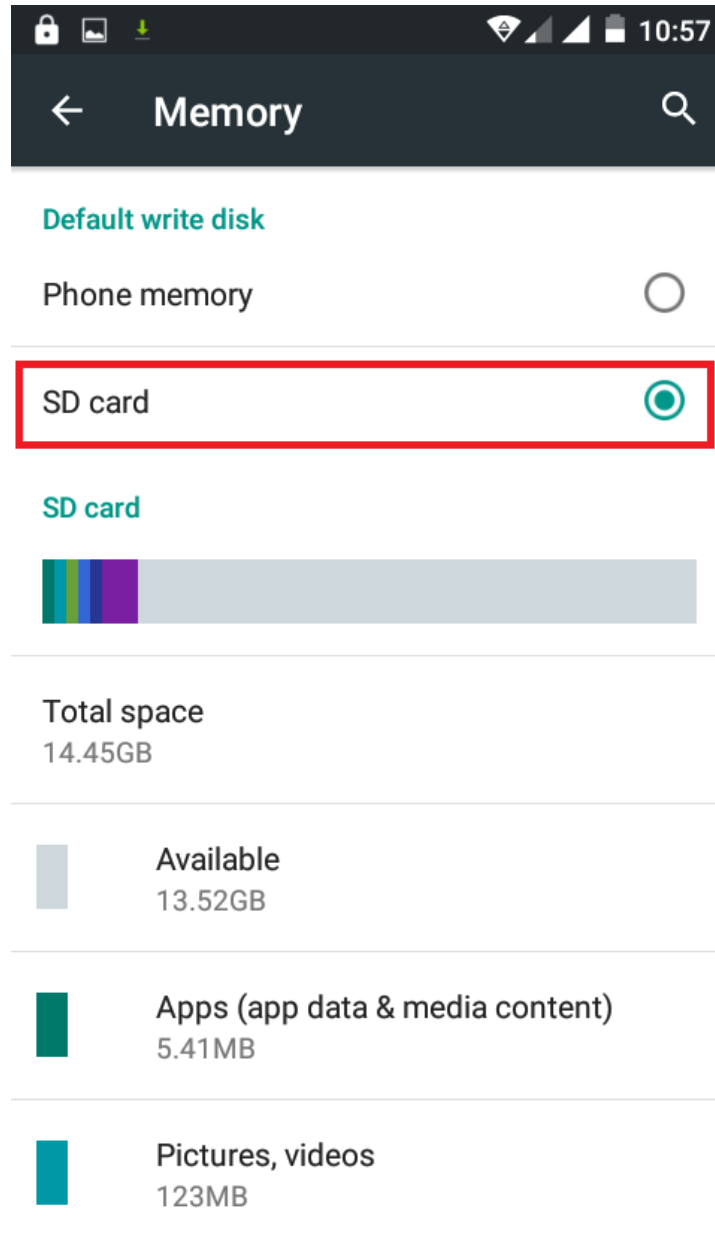


3. Open the **"System updates"** app from the apps menu:




4. In the “**System Update**” app check for a new software version (**P6\_lite\_SV4.0**). Click on **Download**:

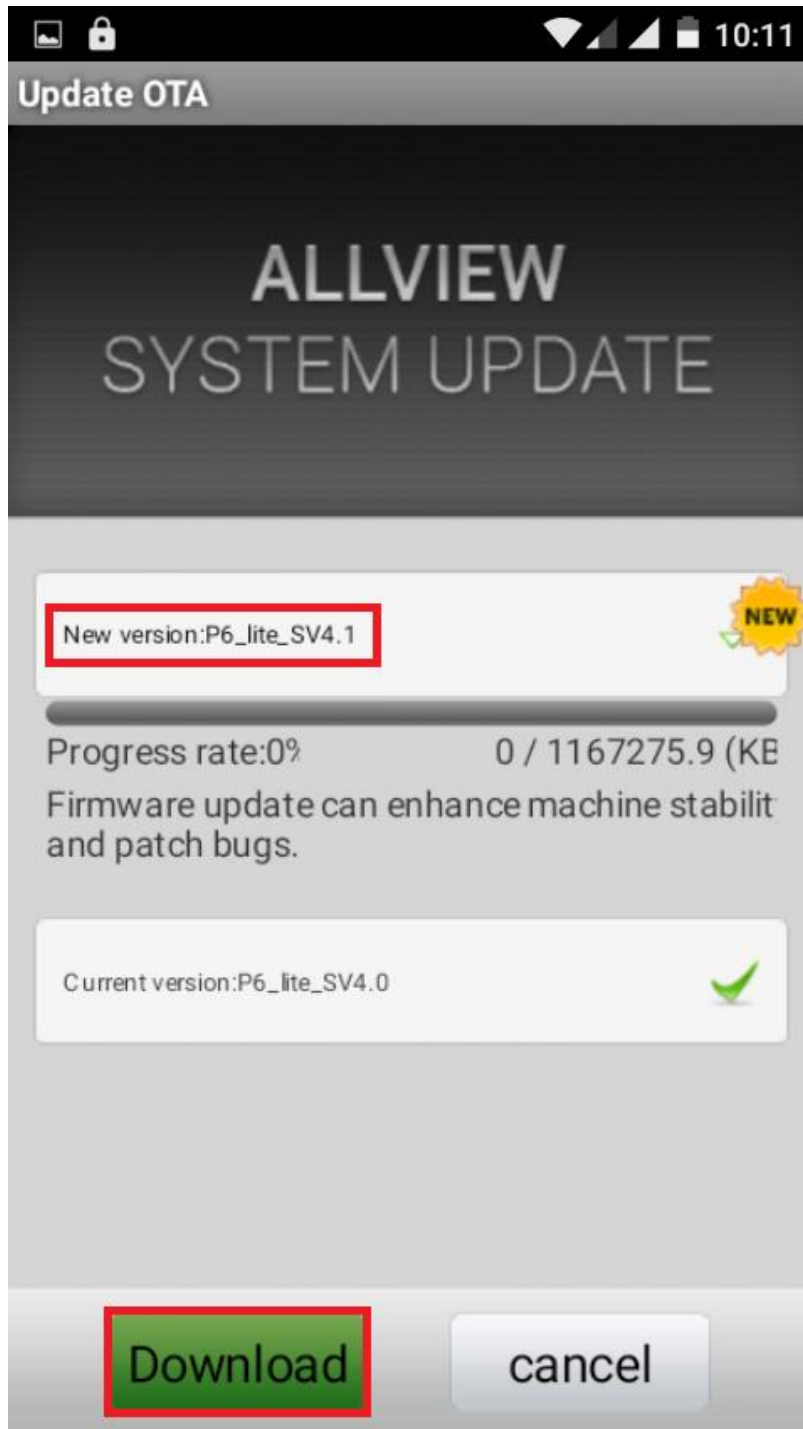

5. Please wait for the full software download in the phone's storage (micro SD card).

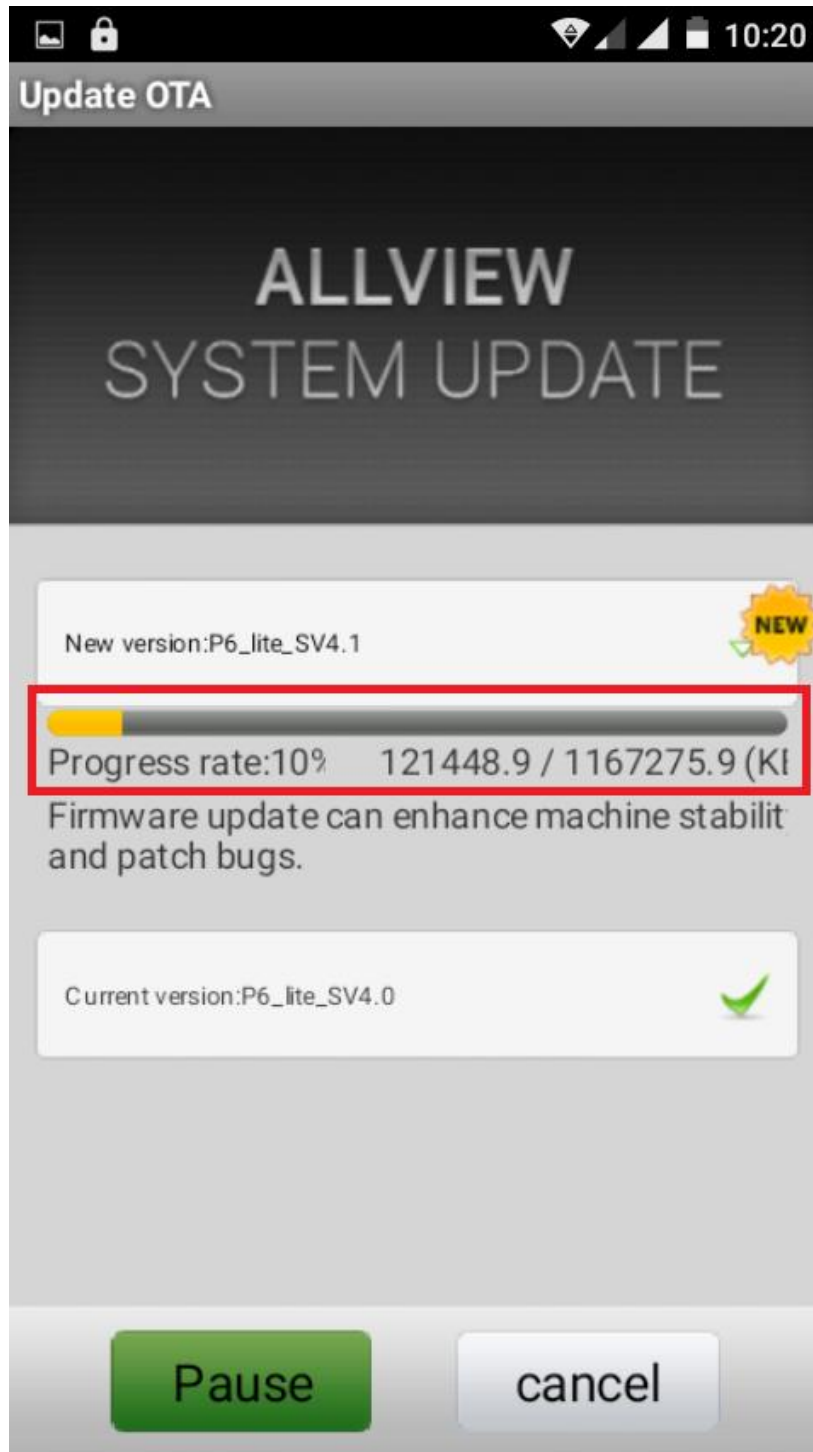


6. After the full software download, a message will be displayed on the phone's screen, informing you about this update:

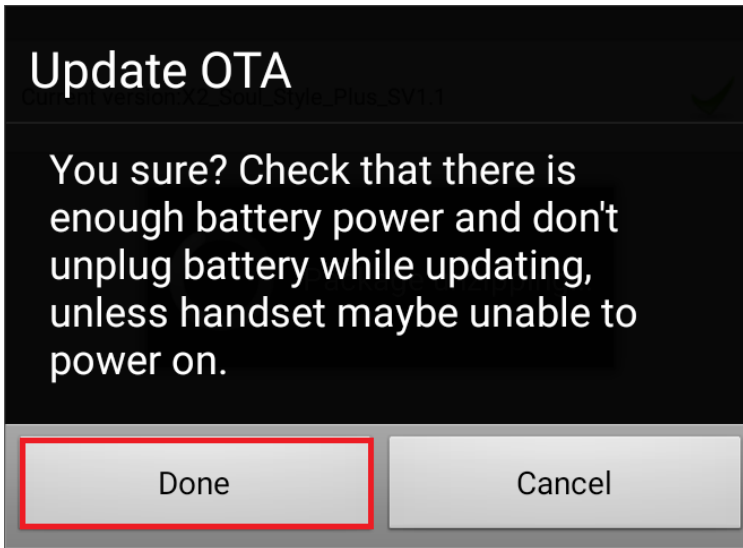

7. Select **Done**. The phone will reboot and the update procedure will automatically start.



8. After finishing the update process, the phone will reboot itself.

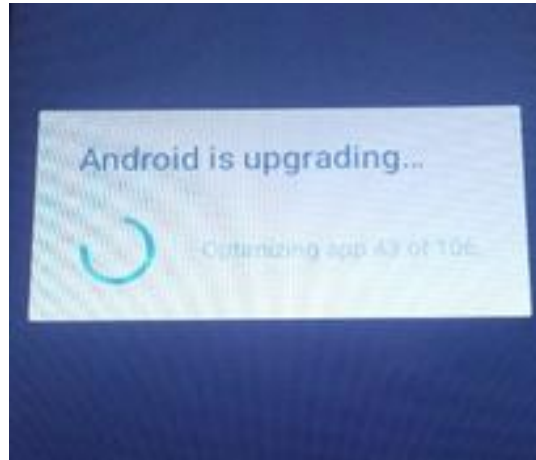

9. **“Android is upgrading”** status will be displayed on the phone’s screen.

*The update file downloaded in the phone's storage (micro SD card) will be deleted automatically after the update process is finished.*